


Personal GPS Tracker

TL-401 User Manual

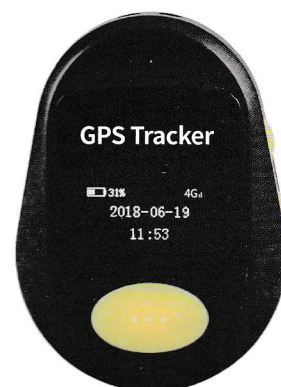

Contents

| | |
|---|----|
| Welcome | 1 |
| Introduction | 1 |
| What is in the Box | 1 |
| Getting to Know TL-401 | 2 |
| Hardware Description | 2 |
| Specification | 3 |
| About the Screen | 4 |
| About Charging | 4 |
| How to Use Your Device | 5 |
| Put the SIM Card | 5 |
| Switching the Device On and Off | 5 |
| Set the Authorized Phone Numbers | 6 |
| Make the SOS Emergency Call | 7 |
| Adjust the Call Volume | 7 |
| Make a Phone Call by the Device | 7 |
| Receive the Phone Call | 8 |
| Set the Listen-in Function | 8 |
| Use the Fall Down Alert | 8 |
| Get the Single Positioning | 9 |
| Set the Low Battery Alarm | 9 |
| How to Use the Tracking Platform | 9 |
| Connect the Tracking Platform | 9 |
| About the Account | 10 |
| Login the GPS Tracking Platform | 10 |
| How to Download APP | 10 |
| More Functions of the Device | 10 |
| Command List | 10 |
| Reset the Device | 11 |
| Cautions | 13 |
| Warranty | 13 |

Page

Welcome

Introduction


TL-401 is newest waterproof IP67 GPS personal tracker 4G/3G. With two-way communication, SOS alarm function, fall down alarm function, auto tracking and listen-in function, it is suitable for children, elder people, lone workers, patients and vehicles. You can implement real-time tracking anywhere via the mobile phone APP or tracking platform. It helps to protect the person who you care about.

What is in the Box

1. Device
2. USB Cable
3. Charger
4. Docking Station
5. User Manual
6. Lanyard
7. Screw Driver & Screws

Getting to Know TL-401

Hardware Description

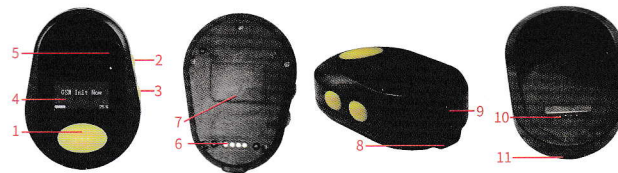


1. SOS Button
2. Call Button
3. Power Button
4. Screen
5. Microphone
6. Charging Contact Point
7. Wireless Charging Receiver (Interior)
8. Lanyard Hole
9. Speaker
10. Charging Contact Point
11. Charger Plug-In Port

Specification

| Content | Specs |
|---|---|
| 3G HSPA Bands | 800/850/900/1900/2100MHz |
| 4G LTE CAT-1 Bands | Europe: B1/B3/B7/B8/B20 America: B2/B4/B12 Australia: B1/B3/B5/B7/B28 |
| Dimensions | 45.9 * 47.9 * 19.0mm |
| Weight | 56g |
| Waterproof Level | IP67 |
| Colour | Black/Blue/Green |
| GPS Sensitivity | Tracking: -165dBm Re-acquisition: -156dBm Acquisition: -148dBm |
| GPS Accuracy | ≤10m |
| GPS Start time | Cold start: 30s Warm start: 22s Hot start: 1s |
| OLED Resolution | 128 * 64 |
| Battery Capacity | 1100mAh |
| SIM Card Type | Nano SIM |
| Firmware Upgrade Mode | OTA/USB |
| Maximum Standby Time | 10 Days |
| The Longest Working Time (5Min upload data once) | 50 Hours |
| Docking Station Charge Current | 500mA (Max) |
| Charging Time | 2-3 Hours |
| Wireless Charge Current | 200mA (Max) |
| Charging Time | 5-6 Hours |
| Operating Temperature | -20°C to +65°C |
| Working Humidity | 5% -- 95% |

About the Screen

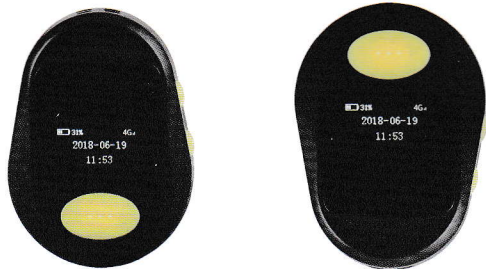

The screen shows date/ time /battery and signal. Besides, the screen is rotatable.

About Charging

Support wireless and docking station charging.




- 4 -

How to Use Your Device

Put the SIM Card

Open the device by screwdriver, put SIM card into the card port. Please tighten the device to make sure the waterproof function.


Notice: To avoid damaging the battery, please make sure the SIM card cover is closed before screwing back the device.

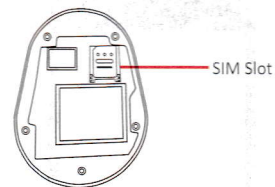

Switching the Device On and Off

Long press the power button more than 2 seconds until the tracker vibrates, the tracker is switched on.

Long press the power button more than 3 seconds until the tracker vibrates, the tracker is switched off.

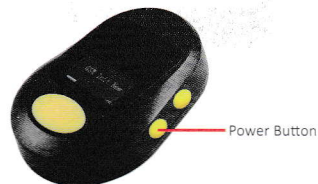

Notice: It is better to get the signal outdoor or near the window.

- 5 -

Set the Authorized Phone Numbers

You can set 8 authorized phone numbers at most.

Put the SIM card and switch on device, then send command **123456A1**, **authorized phone number** via SMS, the device reply: 1 TEL OK!

Example: **123456A1, 18588955622**, details are as the following picture:



Notice: A1 means the first authorized phone number, A2 means the second one and A3 means the third one until A8.
All the letters of commands must be capital.

- 6 -

Make the SOS Emergency Call

Long press SOS button until the device vibrates. SOS alert will be triggered. It will send SOS message to the first authorized phone number and make a 2 way call to A1-A8 authorized phone numbers.

Notice: If A1 misses the calling, the device will call to the next one until someone answers.



HELP ME !A, DATE:18/05/29, TIME: 05/34/26, Speed:000.3, 88-30, <http://maps.google.com/maps?f=q&hl=en&q=22.7614266,114.3614000>

Adjust the Call Volume

Press call button to turn up the volume.

Press power button to turn down the volume.

Make a Phone Call by the Device



Call Button



Power Button

Long press the call button, the screen will show the first authorized phone number, Press the power button, you can choose next number. Press the SOS button, you can call and hang it up.

Notice: Long press the call button again, it will return to the home screen.

- 7 -

Receive the Phone Call

The default setting is to answer the phone automatically after the device rings 4 times. If you want to change it, send command **123456Q3,1** via SMS, then you can pick up the call by pressing the call button and hang up the phone by pressing the SOS button.

Set the Listen-in Function

Send command **123456U1** via SMS, the device answers automatically and enters the listening in mode when you make a call to the device.

Notice: The default setting is two-way audio (**123456U0**). Command of U1 and U0 cannot be used at the same time, you can send command **123456U1/123456U0** to switch it.

Use the Fall Down Alert

Send command **123456KLXXX** to set threshold, XXX is 3 digital number from 000 to 255. 000 means close the drop alarm function. Suggestion: xxx it would be from 045 to 050.

For example, Send command **123456KL045** via SMS, when fall down alert is triggered, the device will send message to the first authorized phone number and give call to A1-A8.

Notice: If A1 misses the calling, the device will call to the next one until someone answers.



SET Low-g Threshold OK!

Mdown!DATE:18/04/24,TIME:
09:18:55,Speed:0.2,53-31,http://
maps.google.com/maps?
f=q&hl=en&q=22.7613424,114.36143
36

- 8 -

Get the Single Positioning

Send command **123456F** via SMS. The device will search the GPS single to get the latest location. If it fails, the device will reply invalid information.

123456F

GPS OK!DATE:18/05/25,TIME:
10:02:38,Speed:0.9,42-27,http://
maps.google.com/maps?
f=q&hl=en&q=22.7614224,114.36140
80

Set the Low Battery Alarm

Send command **123456N1,yy** via SMS.

"yy" means the low battery volume. Such as **123456N1,30**, it means when the battery is below 30%, the device will send message to the first authorized phone number.

How to Use the Tracking Platform

Connect the Tracking Platform

1. Set APN, IP and port

Please confirm the SIM Card GPRS function is activated.

IP connection: Send command **123456CAPN,IP:Port** via SMS. (APN is from your SIM card in the device and IP port is 112.124.14.58:9289)
Example: **123456CCMNET, 112.124.14.58:9289** (CMNET is APN.)

2. Send command **123456D** to turn on GPRS.

- 9 -

About the Account

- 1.Send command **123456B** to get the IMEI number, then share the IMEI number with your contact.
- 2.Ask for an account and password from your contact.

After the above two steps done, you can login the tracking platform or APP start to use it.

Login the GPS Tracking Platform

PC platform website: www.glotracking.com/m

Phone platform website: www.glotracking.com/m

How to Download APP


Please scan the QR code on the bottom left of the webpage to download

More Functions of the Device

Command list is attached as below and if you need help please contact the sales.

Command List

| Function | Command | Example |
|--|-----------------------------|--|
| Set authorized phone number | 123456Ax,phone number | 123456A1,18588955622 x:(1-8) |
| Set Caller ID display name | 123456Ax,phone number, name | 123456A1,18588955622,Lucy x: (1-8) name words maximum is 26 |
| Delete the authorized phone number | 123456Ax,D | 123456A1,D x: (1-8) |
| Set call to two-way call mode | 123456U0 | The default setting is 123456U0. When you make a phone call to the device, it will be two way call mode. |
| Set listen-in mode | 123456U1 | When you make a phone call to the device, it will be listen-in mode. |
| SOS mute call | 123456U2 | It will be listen-in mode when making a SOS call. |
| SOS audio call | 123456U3 | It will be 2 Way audio call when making a SOS call. |
| Set whether the call needs to be verified as an authorization number | 123456Q2,x | 123456Q2,1 x: 0=Only authorization number can make a call to the device, 1= Device can answer any call (Default is 0) |
| Set two-way call mode, the call can take the initiative to answer or hang up | 123456Q3,x | 123456Q3,1 x: 0=The device takes the initiative to answer the call 1= You can pick up the incoming phone by pressing call button or hang it up by pressing SOS button(Default is 0) |
| Set turn on voicemail recognition | 123456Q4,1 | After this function is enabled, when there is an SOS/BMA alarm and the call is successfully made, the recording is played to the other party, prompting the other party to press 1 to confirm that the call is answered manually. If the other party does not press the button 1 within 20 seconds, the machine will hang up automatically, dial the next phone number. Note:This function is only for 4G device, don't support 3G. |
| Set turn off voicemail recognition | 123456Q4,0 | The default is turn off |
| Set fall down alarm | 123456KLxxx | 123456KL045 xxx: Fall down threshold(Sensitivity), 0005xxx<255, 000=Close the fall down alarm function. Suggestion: xxx=050 |
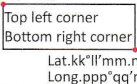
| | | |
|--|--|--|
| Set collision alarm | 123456KHxxx | 123456KH090 xxx: Collision threshold (Sensitivity), 000≤xxx<255, 000=Turn off the collision alarm function Suggestion: xxx=090 |
| Single positioning | 123456F | |
| Set GEO electronic fence alarm | 123456lx,y,z,aabbccddefffg ghhijjkkllmmnnppppqqrrss Lat.aa"bb'cc.dd" Long.fff"gg'ff.ii"  | 123456l1,1,1,51113525N00912567 0E50241115N011011173E x: Electronic fence number group (1-5) y: 0=turn off, 1=turn on z: 0=come in, 1=come out e: N=north latitude, S=south latitude j: E=east longitude, W=west longitude |
| Set over-speed alarm | 123456Jx,yyy | 123456J1,080 (X:0=off, 1=on) yyy: Speed alarm threshold (000-255) |
| Set OLED screen extinguishing time | 123456L2,xx | 123456L2,05 xx:00 mean OLED screen display always on, The maximum is 99 |
| Set local time zone | 123456Lxyy x=- West, x=+ East | 123456L+08 (Default time zone is +08) |
| Set continuous tracking time | 123456Mx,yyyz | 123456M1,005M x: 0=turn off, 1=turn on yyy: Set the time (001-255) z: S=seconds, M=minute, H=hour |
| Set battery low alarm | 123456Nx,yy | 123456N1,30 x: 0=turn off, 1=turn on yy: Low battery value (< 45)30 |
| Ask for the version of IMEI, Hardware and Software | 123456B | |
| Set APN, IP and port | 123456CAPN,IP:Port | 123456CCMMNET, 112.124.14.58:9289 The user can obtain APN from the local SIM card operator |
| Turn on GPRS | 123456D | Default is off |
| Turn off GPRS | 123456E | |
| Set GPRS user name and password | 123456O&&&,@@@ | 123456Ointernet,internet123 &&&: GPRS User name @@@: GPRS password |
| Set GPRS domain name, port | 123456Rhttp://Domain;Port | 123456Rhttp://liaoHong.vicp.net; 6000 Domain: Domain name Port: The port number |
| Delete the GPRS domain name, port | 123456R; | |

- 12 -

| | | |
|----------------------|----------|--|
| OTA Update | 123456UV | Please make sure its battery level is above 50% when send this command to upgrade tracker into the latest version. |
| Reset the device | RESET! | |
| Turn off the tracker | 123456K | The device will be turned off automatically. |

Reset the Device

Send command **RESET!** via SMS, the device will reset to the factory settings.

Notice: The device will restart after sending the message without further response.

Cautions

1. Don't put the unit in overheated or overcooled places.
2. Handle carefully. Don't vibrate or shake it violently.
3. Don't paint the unit, this may cause some foreign materials left in between the parts.
4. Please don't disassemble or refit the unit. The system should be installed by technical personnel.
5. Please use the battery and charger provided by manufacturer. Using other batteries and chargers will cause unwanted situation.
6. This product should be used in the normal condition of GPS signal and GSM signal. If not, it will result in the inability to locate (GPS) or locate data that cannot be transmitted (GSM).
7. The product has position tracking and listen-in functions, the user must use it within the legal limit. If the user illegally use it (such as Invasion of privacy) that lead to damage of others' rights and interests, the consequences are the user's responsibility.
8. This product is obtained by satellite to get the position information. Position data drift is normal, because it is limited by satellite positioning transmission characteristics.

Warranty

One Year.

- 13 -